



SCK GND

TP44 TP45 R40 TP48

3V3 TP40 PWDN SDA0

USB ON/OFF

TP47

R39 U6 C50 C49 C51

SW1

TP19 TP21

R67

R64 R61

C66 C65

C61 R51

U1

TP49 SD_VDD

SD2.0

TP20 TP17 Q3

D2 R18

R10 R9

R16 TP8

R63 R60

D3 R13

R14 TP12

C12 C11

D4 R12

R11 TP12

C10 C9

CARD1

D5 R21

R10 TP11

C8 C8

C64 C67

CARD2

D6 R22

R10 TP10

C6 C6

R56 R58

TP14

D8 C10

R10 TP9

TP18

D9 C11

R10 TP10

TP16

D10 C12

R10 TP10

TP15

D11 C13

R10 TP10

C60 C59

Q1

TP10 TP11 TP12 TP13

TP14 TP15 TP16 TP17

C13 C12 C11 C10 C9 C8 C7 C6 C5 C4 C3 C2 C1

